


INSTALLATION INSTRUCTIONS:

1. Installation of the Temperature Sensor may be accomplished by any a certified aircraft maintenance technician.
2. Tools required: Allen wrench set, Torque wrench, safety wire and wire twister pliers.
3. Check contents of temperature sensor kit to ensure all necessary parts are included. Note: sensor types may differ in style and may not appear as shown in illustration.
4. Remove the cover plate from the battery.
5. Secure sensor to the battery with four (4) drilled head screws (provided with the battery). Torque screws to 6 in-lbs (0.7 N-m) and safety wire per AC43.13-1. Use .0200"(0.51mm) DIA safety wire (lockwire)
6. Make an entry in the aircraft log book recording the installation of the Temperature Sensor assembly.

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
A	REV TO GENERIC	3/19/02	JBT
B	ADDED SAFETY WIRE, AND INSTALLATION INSTRUCTIONS	8/26/02	JBT
C	REV NOTE 3	5/4/04	JBT

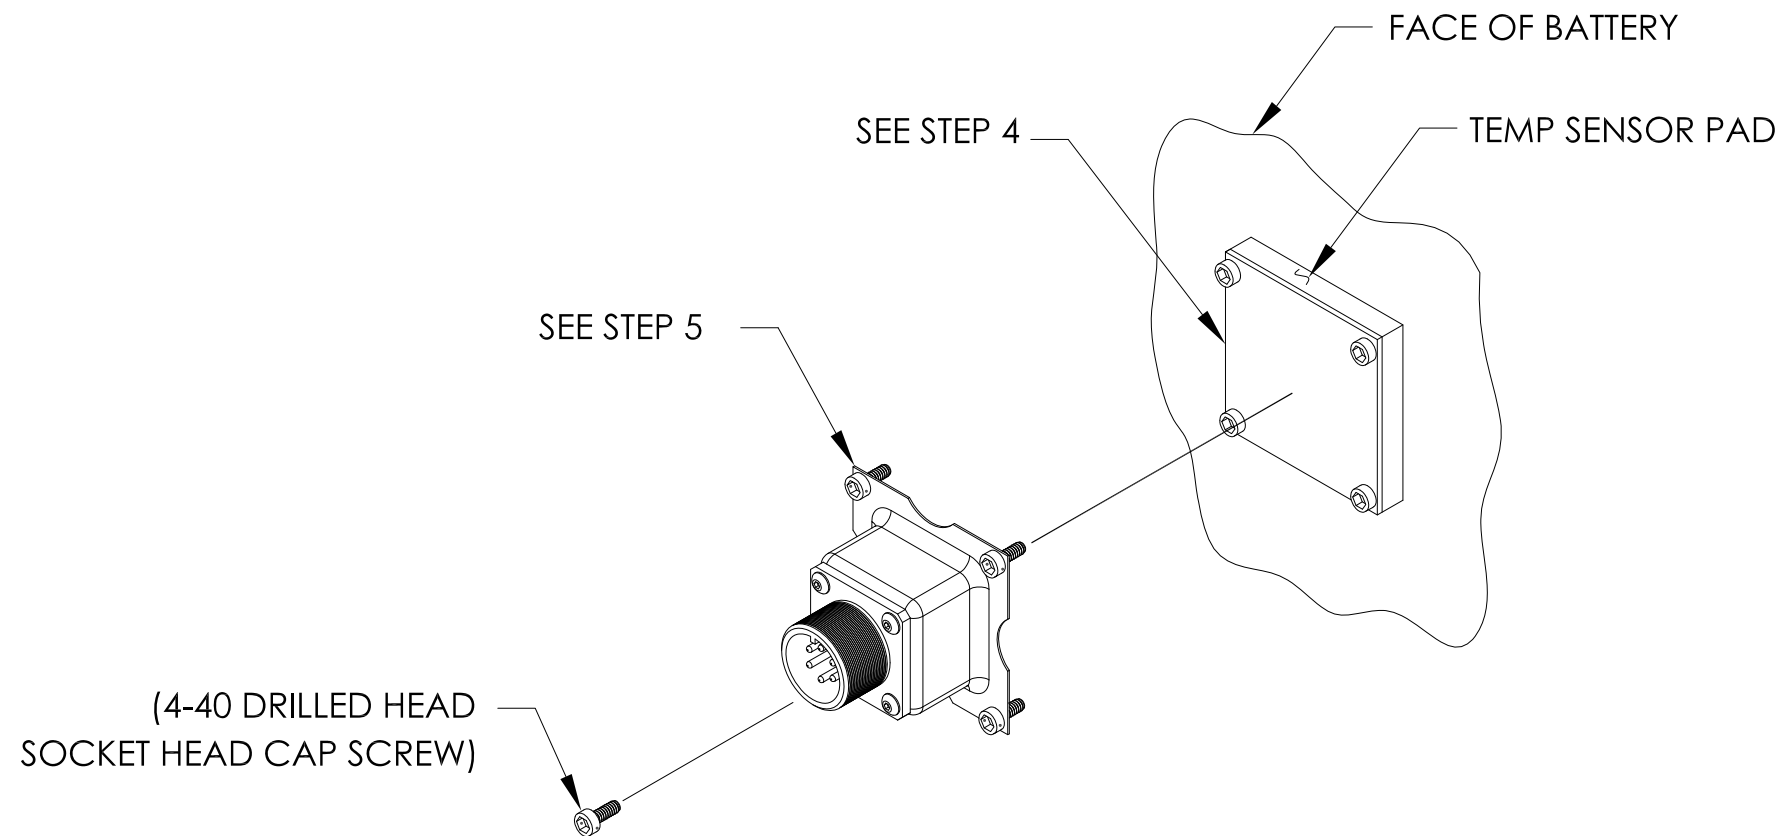

NOTE: SAFETY WIRE NOT SHOWN FOR CLARITY

QTY REQD	CAGE CODE	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION	ITEM NO.
PARTS LIST					
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:			CONTRACT NO.		CONCORDE BATTERY CORPORATION
FRACTIONS DECIMALS ANGLES			NA		2009 SAN BERNARDINO RD, W. COVINA, CA 91790
.XX ±			APPROVALS		TITLE
.XXX ±			DATE		INSTALLATION INSTRUCTION,
TREATMENT			DRAWN S.VALDEZ		L SERIES SENSORS
NONE			CHECKED HRF		SIZE
FINISH			APPROVED JBT		CAGE CODE
NONE			ISSUED AT		DWG NO.
SIMILAR TO NA			5/4/04		5-0117
ACT WT NA			SCALE NONE		REV
CALC WT NA			SHEET 1 OF 1		C

ENGINEERING COPY 04MAY04