



**CONCORDE BATTERY CORPORATION**

2009 San Bernardino Road

West Covina, CA 91790

Phone: 626-813-1234

[www.concordebattery.com](http://www.concordebattery.com)

**RG-450 AIRCRAFT BATTERY**

**COMPONENT MAINTENANCE MANUAL (CMM)**

<b>Document Number</b>	<b>5-0707</b>
<b>Initial Issue Date</b>	<b>Mar 20/2020</b>
<b>Current Revision Date</b>	<b>Mar 20/2020 (Rev. NC)</b>

**APPLICABILITY**

**This CMM is applicable to the RG-450 aircraft battery. This battery has received TSO approval in accordance with TSO-C173a.**

*The data/information contained herein has been reviewed and approved for general release on the basis that this document contains no export-controlled information.*



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

Temporary Revision No.	Page Number	Issue Date	By	Date Removed	By

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**SERVICE BULLETIN LIST**

SB NUMBER	DESCRIPTION	DATE ISSUED

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY

**LIST OF EFFECTIVE PAGES**

SUBJECT	PAGE(S)	DATE OF LATEST REVISION
Title Page	TP-1	Mar 20/2020
Record of Revisions	ROR-1	Mar 20/2020
Record of Temporary Revisions	RTR-1	Mar 20/2020
Service Bulletin List	SBL-1	Mar 20/2020
List of Effective Pages	LOEP-1	Mar 20/2020
Table of Contents	TOC-1 and TOC-2	Mar 20/2020
Introduction	INTRO-1 thru INTRO-3	Mar 20/2020
Description and Operation	1 thru 3	Mar 20/2020
Testing and Fault Isolation	101 thru 109	Mar 20/2020
Schematic and Wiring Diagrams	201	Mar 20/2020
Disassembly	301	Mar 20/2020
Cleaning	401	Mar 20/2020
Check	501	Mar 20/2020
Repair and Disposal	601	Mar 20/2020
Assembly	701	Mar 20/2020
Fits and Clearances	801	Mar 20/2020
Special Tools, Fixtures, Equipment and Consumables	901	Mar 20/2020
Storage (Including Transportation)	1501 thru 1505	Mar 20/2020
Appendix A	A-1	Mar 20/2020
Appendix B	B-2	Mar 20/2020
Appendix C	C-1	Mar 20/2020

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY

**TABLE OF CONTENTS**

SECTION	PAGE
INTRODUCTION	INTRO-1
1. Scope and Purpose	INTRO-1
2. Application	INTRO-1
3. Definitions	INTRO-1
4. Safety Precautions	INTRO-2
5. Airworthiness Limitations	INTRO-3
6. Deviations	INTRO-3
7. Personnel	INTRO-3
8. Shop Verification	INTRO-3
DESCRIPTION AND OPERATION	1
1. General	1
2. Characteristics of RG® Series Main Aircraft Batteries	3
TEST AND FAULT ISOLATION	101
1. Capacity Testing to Verify Continued Airworthiness	101
2. Internally Mounted Components	102
3. Testing Discharged Batteries	102
4. Test Facilities	102
5. Tools, Fixtures, Equipment and Consumables	103
6. Test Set Up	103
7. Capacity Test Procedure	105
8. Constant Potential Charge Procedure	106
9. Conditioning Charge Procedure	106
10. Deep Discharge Recovery Procedure	107
11. Checking Temperature Sensors	108
12. Fault Isolation Summary	109
SCHEMATIC AND WIRING DIAGRAMS	201
DISASSEMBLY	301
CLEANING	401
1. General	401
2. Tools, Fixtures, Equipment and Consumables	401
3. External Cleaning	401
4. Internal Cleaning	401
CHECK	501
1. General	501
2. Tools, Fixtures, Equipment and Consumables	501
3. External Checking	501
4. Internal Checking	501
REPAIR AND DISPOSAL	601
ASSEMBLY	701
FITS AND CLEARANCES	801

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY

SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES	901
1. Tools	901
2. Fixtures	901
3. Equipment	901
4. Consumables	901
ILLUSTRATED PARTS LIST	NOT APPLICABLE
SPECIAL PROCEDURES	NOT APPLICABLE
REMOVAL	NOT APPLICABLE
INSTALLATION	NOT APPLICABLE
SERVICING	NOT APPLICABLE
STORAGE (INCLUDING TRANSPORTATION)	1501
1. Storage Conditions	1501
2. Storage Facilities	1501
3. Tools, Fixtures, Equipment and Consumables	1501
4. Test Set Up	1501
5. Preparation for Installation	1501
6. Constant Potential Charge Procedure	1502
7. Capacity Test Procedure	1502
8. Conditioning Charge Procedure	1503
9. Deep Discharge Recovery Procedure	1504
10. Transportation	1505
APPENDIX A – BATTERY MAINTENANCE LOG	A-1
APPENDIX B – FLOWCHART FOR PREPARING A BATTERY FOR INSTALLATION	B-1
APPENDIX C – FLOWCHART FOR CAPACITY TESTING	C-1

**LIST OF FIGURES**

FIGURE	Page
Figure 101. Test Set Up for RG-450 Aircraft Battery	104

**LIST OF TABLES**

TABLE	Page
Table 101. List of Test Equipment	104
Table 102. List of Mating Connectors	104
Table 103. Resistance of Temperature Sensor Versus Temperature	109
Table 901. List of Test Equipment	901
Table 902. List of Mating Connectors	901

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**INTRODUCTION**

1. Scope and Purpose

A. This Component Maintenance Manual (CMM) has been prepared in accordance with Air Transportation of America (ATA) Specification 100. It provides instructions for proper storage, servicing, replacement, repair, and disposal of the RG-450 valve regulated lead-acid main aircraft batteries manufactured by Concorde Battery Corporation.

2. Application

- A. The battery covered by this CMM is designed for engine starting applications and may also be used as an emergency power supply.
- B. The battery covered by this CMM has no field-replaceable components.

3. Definitions

- A. Valve Regulated Lead-Acid (VRLA) battery - A lead-acid battery in which the internal pressure is regulated by a pressure relief valve and pressure build-up is minimized by internal recombination of gases formed during the charging process. A VRLA battery requires no maintenance of the liquid level which is necessary in some types of flooded lead-acid batteries.
- B. Valve Regulated Sealed Lead-Acid (VRSLA) battery - An alternate terminology for a VRLA battery (see definition above).
- C. Rated C1 capacity - The rated capacity, expressed in Ampere-hours (Ah), obtained from a fully charged battery when discharged at the C1 rate to the specified end point voltage at a temperature of 21 - 25EC (70 - 77EF).
- D. C1 rate - The rate, in amperes, equal to the battery's rated C1 capacity. For the RG-450 aircraft battery, the C1 rating is 40Ah so the C1 rate is 40 amperes.
- E. Nominal Voltage - The nominal cell voltage (2 volts for a lead-acid cell) multiplied by the number of cells in series within the battery. The RG-450 aircraft battery has 12 cells so the nominal voltage is  $2 \times 12 = 24$  volts.
- F. Open Circuit Voltage (OCV) - The voltage of the battery at rest (no charging or discharging current present). A stable OCV requires a rest of at least four hours.
- G. End Point Voltage (EPV) - The voltage at which the discharge current is terminated when measuring battery capacity. Sometimes called cutoff voltage or voltage end point. Unless otherwise stated, the EPV is equal to 20.0 volts.



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

4. Safety Precautions

- A. **WARNING: LOW CAPACITY HAZARD.** Aircraft batteries are certified to have a certain minimum capacity for emergency operations in the event of an electrical generator system failure. Never use a battery that has less than 80% of rated capacity and never “jump start” an aircraft that has a “dead” or discharged battery.
- B. **WARNING: ELECTRIC BURN HAZARD.** Lead-acid batteries are capable of delivering high currents if the terminals are shorted. The resulting heat can cause severe burns and is a potential fire hazard. Take the following precautions:
- Do not place tools or metal objects across battery terminals.
  - Do not wear conductive rings, belt buckles, watches or other jewelry when servicing batteries.
  - Wear insulated gloves and use insulated tools when servicing batteries.
  - Install battery terminal protectors whenever the battery is not connected in the aircraft or to the test equipment.
- C. **WARNING: DANGER OF EXPLODING BATTERIES.** Lead-acid batteries can produce explosive mixtures of hydrogen and oxygen while on charge or discharge, which can explode if ignited. Take the following precautions:
- Never install batteries in an airtight or sealed enclosure and make sure installation is adequately ventilated
  - Do not smoke, use an open flame, or cause sparking near a battery.
  - Wear proper eye and face protection when servicing batteries.
  - Make sure work area is well ventilated.
  - Do not constant current charge a battery when installed in an aircraft.
  - Connect cables securely to the battery terminals to avoid arcing.
- D. **WARNING: DANGER OF CHEMICAL BURNS.** Lead-acid batteries contain sulfuric acid which can cause severe burns to body tissue. Take the following precautions:
- Never remove or damage vent valves.
  - Avoid contact of the electrolyte with skin, eyes or clothing.
  - Do not touch eyes after touching battery.
  - In the event of acid in the eyes, flush thoroughly with clean cool water for several minutes and get professional medical attention immediately.
  - Refer to battery SDS for additional information.
- E. **CAUTION: DANGER OF EQUIPMENT DAMAGE.** Batteries and mating contacts may overheat or sustain arc damage due to improper connections. Take the following precautions:
- Ensure quick disconnect plugs are fully mated and screw terminals are properly torqued. Be aware that loose connections can cause severe overheating of the battery terminals and mating contacts/cables which may damage surrounding equipment and airframe.
  - Ensure the aircraft battery switch or the charger/analyzer is in the “OFF” position before connecting or disconnecting the battery. This practice will prevent damage due to arcing between the terminals and mating contacts.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

5. Airworthiness Limitations

A. The RG-450 aircraft battery is authorized by the FAA in accordance with TSO-C173a and the following limitation applies: "This article meets the minimum performance and quality control standards required by a technical standard order (TSO). Installation of this article requires separate approval."

6. Deviations

A. None.

7. Personnel

A. Only personnel authorized by the cognizant aviation authority are permitted to service Concorde aircraft batteries. For aircraft registered in the USA, 14CFR Part 43.3 applies.

8. Shop Verification

A. The following sections of this CMM were verified by actual performance:

- Testing and Fault Isolation – verified 3/18/20.
- Disassembly – not applicable.
- Assembly – not applicable.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY  
**DESCRIPTION AND OPERATION**

1. General

A. Cell Construction:

Concorde aircraft batteries are valve-regulated, recombinant gas, absorbed electrolyte, lead acid batteries. The cells are sealed with a pressure relief valve that opens when the internal pressure exceeds the valve's relief pressure, then re-closes. The positive and negative plates are sandwiched between layers of glass mat consisting of glass micro fibers of varying length and diameter. This blend features superior wicking characteristics and promotes maximum retention of the electrolyte. Electrolyte is absorbed and held in place by the capillary action between the fluid and the absorptive glass mat (AGM) fibers. By design, the AGM separator is only about 90-95% saturated with electrolyte. The void space provides the channels by which oxygen travels from the positive to the negative plates during charging. When the oxygen gas reaches the negative plate, it reacts with lead to form lead oxide and water. This reaction at the negative plate suppresses the generation of hydrogen that otherwise would come off the negative plate. In this manner, virtually all of the gas is recombined inside the cell, eliminating the need to add water, resulting in "maintenance free" operation.

B. Grids and Plates:

Each cell of a storage battery has positive and negative plates arranged alternately, insulated from each other by separators. Each plate consists of a framework, called the grid, and a lead paste compound called active material. The grid is cast from a lead alloy. A heavy outside frame adds strength to the plate for good vibration and shock durability. The small horizontal and vertical wires support the active material. These wires also act as conductors for the current. The lead paste compound (active material) is applied to the grid in much the same manner as plaster is applied to a lath wall. A different paste formula is used for the positive and negative plates.

C. Plate Groups:

Plate groups are made by joining a number of similar plates to a common terminal post by means of a plate strap. The capacity of a battery is determined by the number and size of plates in a group. Each plate is made with a lug at the top which is fused to the strap. A positive group consists of a number of positive plates connected to a plate strap and a negative group consists of a number of negative plates connected in the same manner. The two groups meshed together with separators between the positive and negative plates constitute a cell element.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

D. Separators:

The main separator material is made of glass microfibers and is commonly called absorptive glass mat (AGM). This material is extremely porous so it retains a high volume of electrolyte and provides a minimum of resistance to the ions passing through it. It is also highly wettable and resists chemical attack from the electrolyte. The AGM is wrapped around the positive plates to insulate them from the negative plates. An extra layer of micro porous polyethylene surrounds the AGM layer to impart extra puncture resistance and improve battery durability. This dual AGM/polyethylene separator system is a unique feature of Concorde's RG<sup>®</sup> Series batteries.

E. Cell Containers:

After the cell elements are assembled, they are placed in a container made of plastic. The plastic used is selected for its high resistance to sulfuric acid, low gas permeability and high impact strength. In many battery models, the container is comprised of a monoblock that houses multiple cells in a single container (for example, 4, 6 and 12 cell monoblocks are common).

F. Cell Covers:

The assembled cell or monoblock has a cover made of plastic material similar to that of the cell container. The cell or monoblock cover has holes through which the terminal posts extend and it also includes the pressure relief valve(s). The cover is permanently sealed to the cell or monoblock container after the plate groups are installed.

G. Electrolyte:

The assembled cell or monoblock contains an electrolyte consisting of a mixture of sulfuric acid and water. The electrolyte is absorbed within the pores of the plates and AGM separator. Unlike flooded (vented) cells there is no "free" electrolyte under normal conditions. Therefore, the battery is classified as nonspillable. During charge, some electrolyte may be expelled from the plate and AGM separator. When charging is stopped, any expelled electrolyte will get reabsorbed into the plates and AGM separator.

H. Theory of Operation:

An electrochemical reaction takes place at each plate when a battery is being charged or discharged, as represented by the following equation:



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

On discharge, lead dioxide (PbO<sub>2</sub>) of the positive electrode and sponge lead (Pb) of the negative electrode are both converted to lead sulfate (PbSO<sub>4</sub>) freeing two electrons. On charge, the lead sulfate in the positive electrode is converted to lead dioxide (PbO<sub>2</sub>) (with oxygen evolution on charge) and the lead sulfate in the negative electrode is converted to sponge lead (with hydrogen evolution on charge). The electrolyte, sulfuric acid (H<sub>2</sub>SO<sub>4</sub>), is an active component in the reaction at both electrodes.

When flooded (vented) batteries are on charge, the oxygen generated at the positive plates escapes from the cell. Concurrently, at the negative plates, hydrogen is generated from water and escapes from the cell. The overall result is the gassing of the cells and water loss. Therefore, flooded cells require periodic water replenishment.

**CAUTION: DO NOT REMOVE THE PRESSURE RELIEF VALVES ON AN RG® BATTERY AND DO NOT ADD WATER OR ELECTROLYTE. THE RECOMBINANT GAS DESIGN ELIMINATES THE NEED TO REPLENISH WATER AND ELECTROLYTE. REMOVING THE PRESSURE RELIEF VALVE VOIDS THE WARRANTY.**

When valve regulated batteries are on charge, oxygen combines chemically with the lead at the negative plates in the presence of sulfuric acid to form lead sulfate and water. This oxygen recombination suppresses the generation of hydrogen at the negative plates. Overall, there is minimal water loss during charging. A very small quantity of water may be lost as a result of self-discharge reactions. However, such loss is so small that no provision need be made for water replenishment. The battery cells have a pressure relief safety valve that may vent if the battery is overcharged.

2. Characteristics of the RG-450 Aircraft Battery

- A. The RG-450 aircraft battery consists of 12 VRLA cells connected in series to make a nominal 24VDC battery. The cells are contained in a metallic outer container equipped with an MS3509 Style 1 electrical receptacle for mating to the aircraft. The battery contains two internal temperature sensors to allow sensing of the battery temperature via a separate electrical receptacle.
- B. Technical characteristics of the RG-450 aircraft battery are detailed on Concorde's website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**TESTING AND FAULT ISOLATION**

1. Capacity Testing to Verify Continued Airworthiness
  - A. Batteries Used to Start Main Turbine Engines:
    1. Operating less than 1000 hours per year.
      - a. Initial check at 12 months after initial installation ( $\pm 1$  month).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 6 months in service ( $\pm 1$  month).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 3 months in service ( $\pm 1$  month).
      - d. If the capacity is less than 85%, remove battery from service.
    2. Operating 1000 hours per year or more:
      - a. Initial check at 1000 hours after initial installation ( $\pm 100$  hours).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 500 hours in service ( $\pm 100$  hours).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 250 hours in service ( $\pm 100$  hours).
      - d. If the capacity is less than 85%, remove battery from service.
  - B. Batteries Not Used to Start Main Turbine Engines:
    1. Operating less than 1000 hours per year:
      - a. Initial check at 12 months after initial installation ( $\pm 1$  month).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 12 months in service ( $\pm 1$  month).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 6 months in service ( $\pm 1$  month).
      - d. If the capacity is less than 85%, remove battery from service.
    2. Operating 1000 hours per year or more:
      - a. Initial check at 1000 hours after initial installation ( $\pm 100$  hours).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 1000 hours in service ( $\pm 100$  hours).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 500 hours in service ( $\pm 100$  hours).
      - d. If the capacity is less than 85%, remove battery from service.

**NOTES:**

**1. THE CAPACITY CHECK INTERVALS SPECIFIED ABOVE ARE GENERAL RECOMMENDATIONS SUITABLE FOR MOST APPLICATIONS. THE INTERVALS MAY BE ADJUSTED FOR A SPECIFIC AIRCRAFT OR FLEET ONCE THE AVERAGE BATTERY LIFE IS ESTABLISHED.**

**2. CAPACITY CHECKS ARE OPTIONAL IF THE BATTERY'S FUNCTIONALITY DOES NOT AFFECT AIRWORTHINESS OF THE AIRCRAFT.**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**WARNING: CAPACITY CHECKS PROVIDE ASSURANCE OF CONTINUED AIRWORTHINESS OF THE BATTERY. ADJUSTMENTS TO THE FREQUENCY OF CAPACITY CHECKS SHOULD BE BASED ON CAREFUL CONSIDERATION OF FACTORS THAT AFFECT BATTERY LIFE. THESE FACTORS INCLUDE OPERATING PATTERNS, ENVIRONMENTAL CONDITIONS, AND CONFIGURATION OF THE AIRCRAFT ELECTRICAL SYSTEM. IF ANY OF THESE FACTORS CHANGE, THE BATTERY LIFE SHOULD BE RE-ESTABLISHED USING THE ORIGINAL CAPACITY CHECK SCHEDULE.**

2. Internally Mounted Components

- A. Temperature Sensors: The RG-450 aircraft battery contains two internally mounted temperature sensors. These temperature sensors should be checked whenever the battery is being serviced for capacity testing. Instructions for checking the temperature sensors are given in Paragraph 11 of this Section.

3. Testing Discharged Batteries

- A. If a battery is discharged below the recommended end point voltage of 20 volts and is not recharged within 24 hours, it should be subjected to a capacity test to assure airworthiness (see Section 7).
- B. After airworthiness is verified, the capacity test schedule may be adjusted using this new date and equipment flight hours as the starting point for the next capacity check interval.

4. Test Facilities

- A. Concorde valve regulated lead-acid (VRLA) batteries may be serviced in any battery facility, including nickel-cadmium service facilities. VRLA batteries are sealed to prevent cross contamination of the electrolyte.

**WARNING: LEAD-ACID BATTERIES CAN PRODUCE EXPLOSIVE MIXTURES OF HYDROGEN AND OXYGEN WHILE BEING CHARGED OR DISCHARGED. NEVER SERVICE BATTERIES IN AN AIRTIGHT OR SEALED ENCLOSURE AND MAKE SURE WORK AREA IS WELL VENTILATED.**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

5. Tools, Fixtures, Equipment and Consumables

- A. Refer to Table 101 for required test equipment.
- B. Refer to Table 102 for mating connectors.

**NOTE: EQUIVALENT SUBSTITUTES MAY BE USED FOR THESE ITEMS.**

**CAUTION: CONTACT CONCORDE FOR ASSISTANCE WITH SELECTION OF BATTERY CHARGING EQUIPMENT. SOME BRANDS OF BATTERY CHARGERS WILL DESTROY THE BATTERY.**

6. Test Set Up

- A. Refer to Figure 101 for a schematic of the test set up.
- B. Make the interconnect cabling locally using mating connectors shown in Table 102.



CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY

Table 101. List of Test Equipment

Description	Source	Part No.	Purpose
Electronic Load, capable of constant current at C1 ADC and 20-28 VDC with EPV termination at 20 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 28.00 – 28.50 VDC and at least 0.2xC1 ADC output*.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 34 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable of 18-34 VDC and 10-100 Kohms with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV and resistance of temperature sensor
Mating Connector	Various	See Table 102	Connect Battery to Test Equipment

\* The output current of the constant potential charging equipment should be set as high as possible. RG® Series batteries can accept charging rates up to 8xC1.

Table 102. List of Mating Connectors

Battery Receptacle (Shown on envelope drawing)	Mating Connector (Obtain locally)
MS3509 Style 1 (IEC 60952-2 Type Q)	MS25182-2 or MS3349-2
MS3102R14S-6P	MS3106R14S-6S

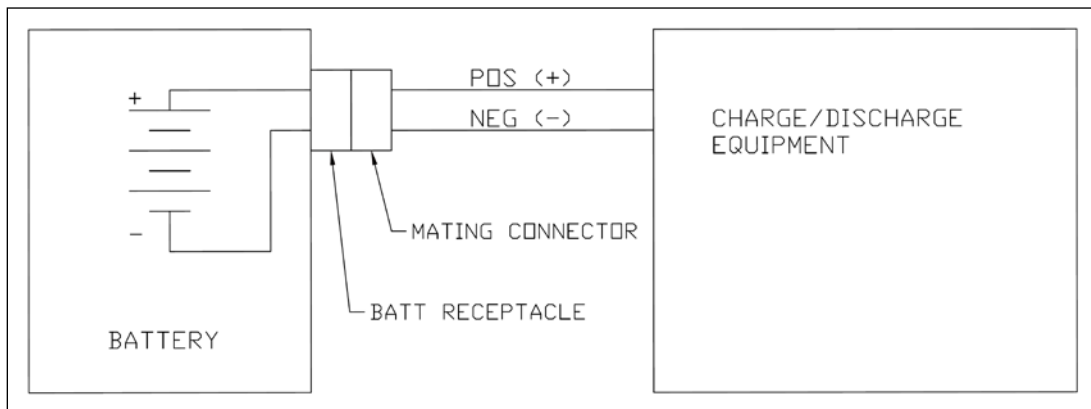


Figure 101. Test Set Up for RG-450 Aircraft Battery

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

7. Capacity Test Procedure

**NOTE: A FLOWCHART FOR CAPACITY TESTING IS PROVIDED IN APPENDIX C.**

- A. If the battery is cold, warm it up to at least 20EC (68EF) before testing.
- B. If the OCV is 20 volts or above, charge the battery at constant potential per Section 8. If the OCV is below 20 volts, perform the deep discharge recovery charge per Section 10.
- C. Connect the battery to the discharge equipment and discharge at the C1 rate on the label (i.e., 40 Amps for a 40 Ah battery).
- D. Discharge the battery to an EPV of 20 volts or other EPV specified by the airframe or equipment manufacturer.
- E. Record the minutes to the EPV and the % capacity (% capacity = discharge minutes x 1.667) in the Battery Maintenance Log. An example Battery Maintenance Log is provided in Appendix A; alternate formats are acceptable.
- F. The battery passes the capacity test if the time to the EPV is 51 minutes or greater (85% of rated C1 capacity or greater).
- G. The battery is over 90% of rated capacity if the time to the EPV is greater than 54 minutes.

**NOTE: AIRFRAME OR ACCESSORY EQUIPMENT MANUFACTURERS MAY SPECIFY A DIFFERENT CAPACITY TEST REQUIREMENT, WHICH SHALL TAKE PRECEDENCE.**

- H. If the battery passes the capacity test, charge at constant potential per Section 8 and return battery to full state of charge. The battery is acceptable for installation.
- I. If the battery fails the capacity test, perform the conditioning procedure given in Section 9. After the battery has been conditioned repeat the capacity test.
- J. If the battery passes the second capacity test, charge at constant potential per Section 8 and return battery to full state of charge. The battery is acceptable for installation.
- K. If the battery fails the second capacity test, repeat the conditioning charge per Section 9 and repeat the capacity test.
- L. If the battery passes the third capacity test, charge at constant potential per Section 8 and return battery to full state of charge. The battery is acceptable for installation.
- M. If the battery fails the third capacity test, the battery should be replaced.
- N. If the battery gets very hot (greater than 55EC/130EF) during constant potential charging, the battery should be replaced.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

8. Constant Potential Charge Procedure

**NOTE: CONSTANT POTENTIAL CHARGING IS THE PREFERRED METHOD OF CHARGING THE BATTERY. IF THE BATTERY DOES NOT PASS THE CAPACITY TEST, THE CONDITIONING CHARGE PROCEDURE SHOULD THEN BE USED.**

- A. Connect the battery terminals to the constant potential charging equipment.
- B. Apply a constant potential of  $28.25 \pm 0.25$  volts with a current capability of at least  $0.2 \times C1$  amperes (8 amperes for a 40 Ah battery).

**NOTE: THE OUTPUT CURRENT OF THE CHARGING EQUIPMENT SHOULD BE SET AS HIGH AS POSSIBLE. RG® SERIES BATTERIES CAN ACCEPT CHARGING RATES UP TO  $8 \times C1$  (320 AMPERES FOR A 40 AH BATTERY).**

- C. Charge until the charge current falls below 5% of the battery C1 rating (i.e., 2.0 amperes for a 40 Ah battery) and then continue charging at the same constant potential for a minimum of 4 more hours.

**NOTE: TERMINATE CHARGING IF THE CHARGE CURRENT DOES NOT FALL BELOW 2 AMPERES WITHIN 8 HOURS.**

9. Conditioning Charge Procedure

**WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.**

**CAUTION (1): A CONDITIONING CHARGE IS ONLY NECESSARY IF THE BATTERY FAILS THE CAPACITY TEST. THIS PROCEDURE MAY SHORTEN THE BATTERY'S LIFE IF PERFORMED ON A REPETITIVE BASIS.**

**CAUTION (2): THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.**

**CAUTION (3): IF THE BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CONDITIONING CHARGE, STOP THE CURRENT AND ALLOW THE BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.**

**NOTE (1): CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.**

**NOTE (2): IF A BATTERY REQUIRES A CONDITIONING CHARGE TO PASS THE CAPACITY TEST, SUBSEQUENT CAPACITY CHECKS SHOULD BE AT THE INCREASED FREQUENCY SPECIFIED IN PARAGRAPH 1 OF THIS SECTION (3 MONTHS/250 HOURS FOR MAIN TURBINE ENGINE BATTERIES OR 6 MONTHS/500 HOURS FOR ALL OTHER BATTERIES).**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

- A. Discharge the battery at the C1 rate (40 amperes) to an EPV of 20 volts. If the battery has already been discharged to the EPV, skip this step.
- B. Connect the battery to the constant current charging equipment as specified in Table 101.
- C. Charge at a constant current rate of C1/10 (i.e., 4.0 amperes for 40 Ah battery) for 16 hours and then discontinue charging. The conditioning charge does not need to be continuous, i.e., pauses may be included. For example, an 8 hour charge on the first day followed by an 8 hour charge on the second day is allowable.
- D. After the conditioning charge, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test.

10. Deep Discharge Recovery Procedure

**WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.**

**CAUTION (1): THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A DEEP DISCHARGE RECOVERY CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.**

**CAUTION (2): IF THE BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CHARGE, STOP THE CURRENT AND ALLOW THE BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.**

**NOTE: CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.**

- A. Connect the battery to the constant current charging equipment as specified in Table 101.
- B. Charge at a constant current rate of C1/10 (i.e., 4.0 amperes for a 40 Ah battery) until the battery voltage reaches 31.0 volts, then continue charging at the same constant current rate for an additional 4 hours. The charge cycle should be continuous when using this method, i.e., no pauses should be included. However, if there is an interruption (e.g., due to a local power outage), continue from where the profile stopped and run to completion.

**NOTE (1): IF THE BATTERY VOLTAGE EXCEEDS 31 VOLTS AT THE BEGINNING OF CHARGE AND THEN DROPS BELOW 31 VOLTS WITHIN 2 HOURS, CONTINUE CHARGING AT CONSTANT CURRENT UNTIL THE VOLTAGE REACHES 31 VOLTS A SECOND TIME. THEN CONTINUE CHARGING FOR AN ADDITIONAL 4 HOURS AS SPECIFIED ABOVE.**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**NOTE (2): IF THE BATTERY VOLTAGE DOES NOT REACH 31 VOLTS WITHIN 24 HOURS, THE CHARGE SHOULD BE TERMINATED.**

- C. After the charge is complete, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test.

11. Checking Temperature Sensors

- A. Stabilize battery at an ambient temperature in the range of 0 to 41°C for a minimum of 20 hours.
- B. Using an DMM, measure the resistance (ohms) of T1 between pins B and C of receptacle J1.
- C. Using an DMM, measure the resistance (ohms) of T2 between pins E and F of receptacle J1.
- D. Based on the ambient temperature to which the battery is stabilized, read the minimum and maximum allowable resistance values given in Table 103.
- E. Reject the battery if the resistance values measured in Steps (B) and (C) are outside the allowable range determined in Step (D).

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY

Table 103. Resistance of Temperature Sensor Versus Temperature

Temp°C	Temp°F	Min. Kohms	Max. Kohms		Temp°C	Temp°F	Min. Kohms	Max. Kohms
0	32.0	83.33	127.72		21	69.8	28.71	43.90
1	33.8	78.97	121.02		22	69.8	27.38	41.87
2	35.6	74.86	114.72		23	71.6	26.10	39.90
3	37.4	70.97	108.75		24	73.4	24.91	38.08
4	39.2	67.35	103.17		25	75.2	23.77	36.34
5	41.0	63.88	97.86		26	77.0	22.69	34.68
6	42.8	60.63	92.87		27	78.8	21.66	33.11
7	44.6	57.57	88.17		28	80.6	20.69	31.62
8	46.4	54.68	83.73		29	82.4	19.76	30.20
9	48.2	51.95	79.54		30	84.2	18.89	28.85
10	50.0	49.36	75.57		31	86.0	18.05	27.57
11	51.8	46.92	71.82		32	87.8	17.26	26.36
12	53.6	44.62	68.29		33	89.6	16.50	25.20
13	55.4	42.44	64.94		34	93.2	15.78	24.10
14	57.2	40.37	61.77		35	95.0	15.10	23.06
15	59.0	38.43	58.79		36	96.8	14.45	22.06
16	60.8	36.57	55.95		37	98.6	13.83	21.11
17	62.6	34.82	53.25		38	100.4	13.24	20.21
18	64.4	33.18	50.74		39	102.2	12.68	19.35
19	66.2	31.61	48.34		40	104.0	12.15	18.54
20	68.0	30.12	46.05		41	105.8	11.64	17.76

12. Fault Isolation Summary

Symptom	Probable Cause	Corrective Action
Low voltage / no voltage.	Battery partially or fully discharged.	Perform capacity test.
Battery capacity less than 85% of rating.	Battery cells beyond serviceable life.	Replace battery.
Battery does not hold charge.	Battery cells beyond serviceable life.	Replace battery.
Battery gets hot during constant potential charging.	Battery cells beyond serviceable life.	Replace battery.
Temperature sensor outside of allowable range.	Temperature sensor fault.	Replace battery.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY  
**SCHEMATIC AND WIRING DIAGRAMS**

1. General

- A. Schematic diagrams and polarity markings are shown on the envelope drawing of the RG-450 aircraft battery.
- B. The latest approved envelope drawings are available on Concorde's website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY  
**DISASSEMBLY**

1. General

- A. The RG-450 aircraft battery has no field-replaceable components and is not designed for disassembly/re-assembly.



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**CLEANING**

1. General

- A. This section contains general cleaning instructions for Concorde aircraft batteries.
- B. Clean battery when it is being serviced for capacity testing.
- C. Batteries do not need to be disassembled for cleaning.

**CAUTION: DO NOT USE ANY TYPE OF SOLVENT TO CLEAN THE BATTERY. SOLVENTS MAY DAMAGE THE BATTERY.**

2. Tools, Fixtures, Equipment and Consumables

- A. Consumables: Lint-free shop cloth (commercially available) and tap water (commercially available).

3. External Cleaning

- A. Clean the outside surfaces of the battery with a lint-free shop cloth that is clean, dry, and free of oil.
- B. If the battery has caked-on dirt or grime, use a cloth dampened with tap water, then wipe dry.

4. Internal Cleaning:

- A. Internal cleaning is not required.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**CHECK**

1. General
  - A. This section contains general checking instructions for Concorde aircraft batteries.
  - B. Check battery when it is being serviced for capacity testing.
  - C. Batteries do not need to be disassembled for checking.
2. Tools, Fixtures, Equipment and Consumables
  - A. None required.
3. External Checking
  - A. Check the outside surfaces of the battery and electrical connector(s) for deterioration or corrosion that may affect the battery's operation.
  - B. Check the battery for loose or missing fasteners.
  - C. Check the identification and informational labels to ensure they are legible and securely attached.
  - D. If the above checks reveal items that need attention, repair or replace battery as appropriate.
4. Internal Checking
  - A. Internal checks are not required.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**REPAIR AND DISPOSAL**

1. General

- A. The RG-450 aircraft battery has no internal components that are repairable. The battery assembly must be replaced when internal components (i.e., battery cells or temperature sensors) fail or wear out.
- B. Refer to the Section on TESTING AND FAULT ISOLATION to determine if the battery assembly needs to be replaced.
- C. If the battery is not subjected to capacity testing in accordance with Section 1 under TESTING AND FAULT ISOLATION, it is recommended that the battery be replaced when it reaches 4 years of service life.
- D. If external repairs are needed to the battery assembly, contact Concorde for assistance (see front page of this CMM).

2. Disposal

- A. Concorde aircraft batteries contain lead, sulfuric acid, and other hazardous materials. Never discard batteries in the trash or in a landfill.
- B. The battery materials are recyclable. Dispose spent batteries and assemblies in accordance with local ordinances and regulations.
- C. The RG-450 aircraft battery is encased in an aluminum container, which need to be removed before the rest of the battery is sent to a lead smelter for recycling. Make sure the recycling collector is aware of this requirement.
- D. See battery Safety Data Sheet (SDS) for additional information.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY  
**ASSEMBLY**

1. General

- A. The RG-450 aircraft battery has no field-replaceable components and is not designed for disassembly/re-assembly.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**FITS AND CLEARANCES**

1. General

- A. Refer to the envelope drawing for the RG-450 aircraft battery. The envelope drawing provides overall dimensions, mounting provisions, and maximum weight of the battery.
- B. The latest approved envelope drawing is available on Concorde's website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY

**SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES**

1. Tools  
A. Not applicable.
2. Fixtures  
A. Not applicable.
3. Equipment  
A. Refer to Tables 901 and 902.

**NOTE: EQUIVALENT SUBSTITUTES MAY BE USED FOR THESE ITEMS.**

4. Consumables  
A. Lint-free cloth (commercially available).  
B. Tap water (commercially available).

Table 901. List of Test Equipment

Description	Source	Part Number	Purpose
Electronic Load, capable of constant current at C1 ADC and 20-28 VDC with EPV termination at 20 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 28.0 – 28.5 VDC and at least 0.2xC1 ADC output*.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 34 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable of 18-34 VDC accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 902	Connect Battery to Test Equipment

\* The output current of the constant potential charging equipment should be set as high as possible. RG® Series batteries can accept charging rates up to 8xC1.

Table 902. List of Mating Connectors

Battery Receptacle (Shown on envelope drawing)	Mating Connector (Obtain locally)
MS3509 Style 1 (IEC 60952-2 Type Q)	MS25182-2 or MS3349-2
MS3102R14S-6P	MS3106R14S-6S

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**STORAGE (INCLUDING TRANSPORTATION)**

1. Storage Conditions

- A. Batteries are serviced and charged at the factory prior to shipment.
- B. To minimize self-discharge, batteries should be stored in a cool location, ideally below 20EC (68EF).
- C. The open circuit voltage (OCV) of a fully charged battery is approximately 26.0 volts. As the battery state of charge drops due to self-discharge, its OCV also declines.
- D. Batteries should be boost charged per Section 6 when the OCV declines to 25.0 volts.
- E. Batteries with an OCV below 25.0 volts must be capacity tested per Section 7 before being placed in service.
- F. Batteries in storage for longer than 24 months must be capacity tested per Section 7 before being placed in service.

**CAUTION: WHEN BATTERIES ARE INSTALLED IN AIRCRAFT DURING STORAGE (OR EXTENDED PERIODS OF NON-USE), IT IS BEST TO DISCONNECT THE BATTERY CONNECTOR. THIS PRACTICE WILL ELIMINATE UNNECESSARY DRAIN ON THE BATTERY WHEN PARASITIC LOADS ARE PRESENT. OTHERWISE, THE BATTERY SERVICE LIFE MAY BE ADVERSELY AFFECTED.**

2. Storage Facilities

- A. Concorde valve regulated lead-acid aircraft batteries may be stored and serviced in any battery facility, including nickel-cadmium service facilities. These batteries are sealed to prevent cross contamination of the electrolyte.
- B. Lead-acid batteries can produce explosive mixtures of hydrogen and oxygen while being charged or discharged. Never service batteries in an airtight or sealed enclosure and make sure the work area is well ventilated.

3. Tools, Fixtures, Equipment and Consumables

- A. Refer to Table 901 for a list of test equipment.
- B. Refer to Table 902 for mating connectors.

4. Test Set Up

- A. Refer to Figure 101.

5. Preparation for Installation

**NOTE: A FLOWCHART FOR PREPARING A BATTERY FOR INSTALLATION IS PROVIDED IN APPENDIX B.**

- A. Remove battery from the shipping carton and visually inspect the battery for signs of damage. Do not use the battery if it appears to be damaged, contact Concorde for assistance

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

- B. Measure the battery's open circuit voltage (OCV) with a DMM.
- C. If the OCV equals or exceeds 25.5 volts, the battery can be installed in the aircraft without boost charging.
- D. If the OCV equals or exceeds 25.0 volts and is less than 25.5 volts, apply a boost charge per Section 6. The battery can then be installed in the aircraft.
- E. If the OCV is below 25.0 volts, perform a capacity test per Section 7 before installing in the aircraft.

6. Constant Potential Charge Procedure

**NOTE: CONSTANT POTENTIAL CHARGING IS THE PREFERRED METHOD OF CHARGING THE BATTERY. IF THE BATTERY FAILS THE CAPACITY TEST, THE CONDITIONING CHARGE PROCEDURE SHOULD BE USED.**

- A. Connect the battery terminals to the constant voltage charging equipment.
- B. Apply a constant potential of  $28.25 \pm 0.25$  volts with a current capability of at least  $0.2 \times C1$  amperes (8 amperes for a 40 Ah battery).

**NOTE: THE OUTPUT CURRENT OF THE CHARGING EQUIPMENT SHOULD BE SET AS HIGH AS POSSIBLE. RG<sup>®</sup> SERIES BATTERIES CAN ACCEPT CHARGING RATES UP TO  $8 \times C1$  (320 AMPERES FOR A \$) AH BATTERY).**

- C. Charge until the charge current falls below 5% of the battery C1 rating (i.e., 2.0 amperes for a 40 Ah battery) and then continue charging at the same constant potential for a minimum of 4 more hours.

**NOTE: TERMINATE CHARGING IF THE CHARGE CURRENT DOES NOT FALL BELOW 2 AMPERES WITHIN 8 HOURS.**

7. Capacity Test Procedure

**NOTE: A FLOWCHART FOR CAPACITY TESTING IS PROVIDED IN APPENDIX C.**

- A. If the battery is cold, warm it up to at least 20EC (68EF) before testing.
- B. If the OCV is 20 volts or above, charge the battery at constant potential per Section 6. If the OCV is below 20 volts, perform the deep discharge recovery charge per Section 9.
- C. Connect the battery to the discharge equipment and discharge at the C1 rate on the label (i.e., 40 amperes for a 40 Ah battery).
- D. Discharge the battery to an end point voltage of 20 volts or other EPV specified by the airframe or equipment manufacturer.
- E. Record the minutes to the EPV and the % capacity (% capacity = discharge minutes  $\times$  1.667) in the Battery Maintenance Log. An example Battery Maintenance Log provided in Appendix A; alternate formats are acceptable.



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

- F. The battery passes the capacity test if the time to the EPV is 51 minutes or greater (85% of rated C1 capacity or greater).
- G. The battery is over 90% of rated capacity if the time to the EPV is greater than 54 minutes.

**NOTE: AIRFRAME OR ACCESSORY EQUIPMENT MANUFACTURERS MAY SPECIFY A DIFFERENT CAPACITY TEST REQUIREMENT, WHICH SHALL TAKE PRECEDENCE.**

- H. If the battery passes the capacity test, charge at constant potential per Section 6 and return battery to full state of charge. The battery is acceptable for installation.
  - I. If the battery fails the capacity test, perform the conditioning procedure given in Section 8. After the battery has been conditioned repeat the capacity test.
  - J. If the battery passes the second capacity test, charge at constant potential per Section 6 and return battery to full state of charge. The battery is acceptable for installation.
  - K. If the battery fails the second capacity test, repeat the conditioning charge per Section 8 and repeat the capacity test.
  - L. If the battery passes the third capacity test, charge at constant potential per Section 6 and return battery to full state of charge. The battery is acceptable for installation.
  - M. If the battery fails the third capacity test, the battery should be replaced.
  - N. If the battery gets very hot (greater than 55EC/130EF) during constant potential charging, the battery should be replaced.
8. Conditioning Charge Procedure

**WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.**

**CAUTION (1): A CONDITIONING CHARGE IS ONLY NECESSARY IF THE BATTERY FAILS THE CAPACITY TEST. THIS PROCEDURE MAY SHORTEN THE BATTERY'S LIFE IF PERFORMED ON A REPETITIVE BASIS.**

**CAUTION (2): THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.**

**CAUTION (3): IF BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CONDITIONING CHARGE, STOP THE CURRENT AND ALLOW BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**NOTE (1): CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.**

- A. Discharge the battery at the C1 rate (40 amperes) to an EPV of 20 volts. If the battery is already discharged to the EPV, skip this step.
- B. Connect the battery to the constant current charging equipment as specified in Table 901.
- C. Charge at a constant current rate of C1/10 (i.e., 4.0 Amps for a 40 Ah battery) for 16 hours and then discontinue charging. The conditioning charge does not need to be continuous, i.e., pauses may be included. For example, an 8 hour charge on the first day followed by an 8 hour charge on the second day is acceptable.
- D. After the conditioning charge, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test

9. Deep Discharge Recovery Procedure

**WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.**

**CAUTION (1): THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.**

**CAUTION (2): IF BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CONDITIONING CHARGE, STOP THE CURRENT AND ALLOW BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.**

**NOTE: CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.**

- A. Connect the battery to the constant current charging equipment per Table 901 or 902 as applicable.
- B. Charge at a constant current rate of C1/10 (i.e., 4.0 Amps for a 40 Ah battery) until the battery voltage reaches 31.0 volts, then continue charging at the same constant current rate for an additional 4 hours. The charge cycle should be continuous when using this method, i.e., no pauses should be included. However, if there is an interruption (e.g., due to a local power outage), continue from where the profile stopped and run to completion.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

**NOTE (1): IF THE BATTERY VOLTAGE EXCEEDS 31 VOLTS AT THE BEGINNING OF CHARGE AND THEN DROPS BELOW 31 VOLTS WITHIN 2 HOURS, CONTINUE CHARGING AT CONSTANT CURRENT UNTIL THE VOLTAGE REACHES 31 VOLTS A SECOND TIME. THEN CONTINUE CHARGING FOR AN ADDITIONAL 4 HOURS AS SPECIFIED ABOVE.**

**NOTE (2): IF THE BATTERY VOLTAGE DOES NOT REACH 31 VOLTS WITHIN 24 HOURS, THE CHARGE SHOULD BE TERMINATED.**

- C. After the charge is complete, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test.

10. Transportation

- A. If the OCV is less than 25.5 volts, charge the battery per Section 6 before shipment.
- B. The battery should be packaged in its original container. If the original container is not available, follow local packaging regulations applicable to the mode of transport.
- C. RG® Series batteries are classified as a “NONSPILLABLE BATTERY” and comply with hazardous shipping exceptions of the International Air Transport Association (IATA) Dangerous Goods Regulations, International Maritime Dangerous Goods (IMDG) Code, and US Department of Transportation (DOT). As such, they can be shipped as non-hazardous by any means when packaged in original container and terminals are protected from short circuit. Refer to battery SDS for additional information, including shipping paper requirements.

Concorde Battery P/N:	Battery S/N:
-----------------------	--------------

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY


Date of Initial Installation:	A/C Hours @ Date of Installation:		
	OCV @ Time of Installation:		V
Aircraft Make:	Model:	S/N:	
Aircraft Location (Home base)			
1 <sup>st</sup> Removal Date:	A/C Hours @ Date of Removal:		
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
2 <sup>nd</sup> Removal Date:	A/C Hours @ Date of Removal:		
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
3 <sup>rd</sup> Removal Date:	A/C Hours @ Date of Removal:		
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
4 <sup>th</sup> Removal Date:	A/C Hours @ Date of Removal:		
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
5 <sup>th</sup> Removal Date:	A/C Hours @ Date of Removal:		
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
6 <sup>th</sup> Removal Date:	A/C Hours @ Date of Removal:		
Reason for Removal:	Capacity Check	%	Minutes

APPENDIX A – BATTERY MAINTENANCE LOG\*

\* NOTE: This log may be used in support of a warranty claim only when supplied with other required documentation as defined in the battery warranty policy.

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG-450 AIRCRAFT BATTERY

APPENDIX B – FLOWCHART FOR PREPARING A BATTERY FOR INSTALLATION

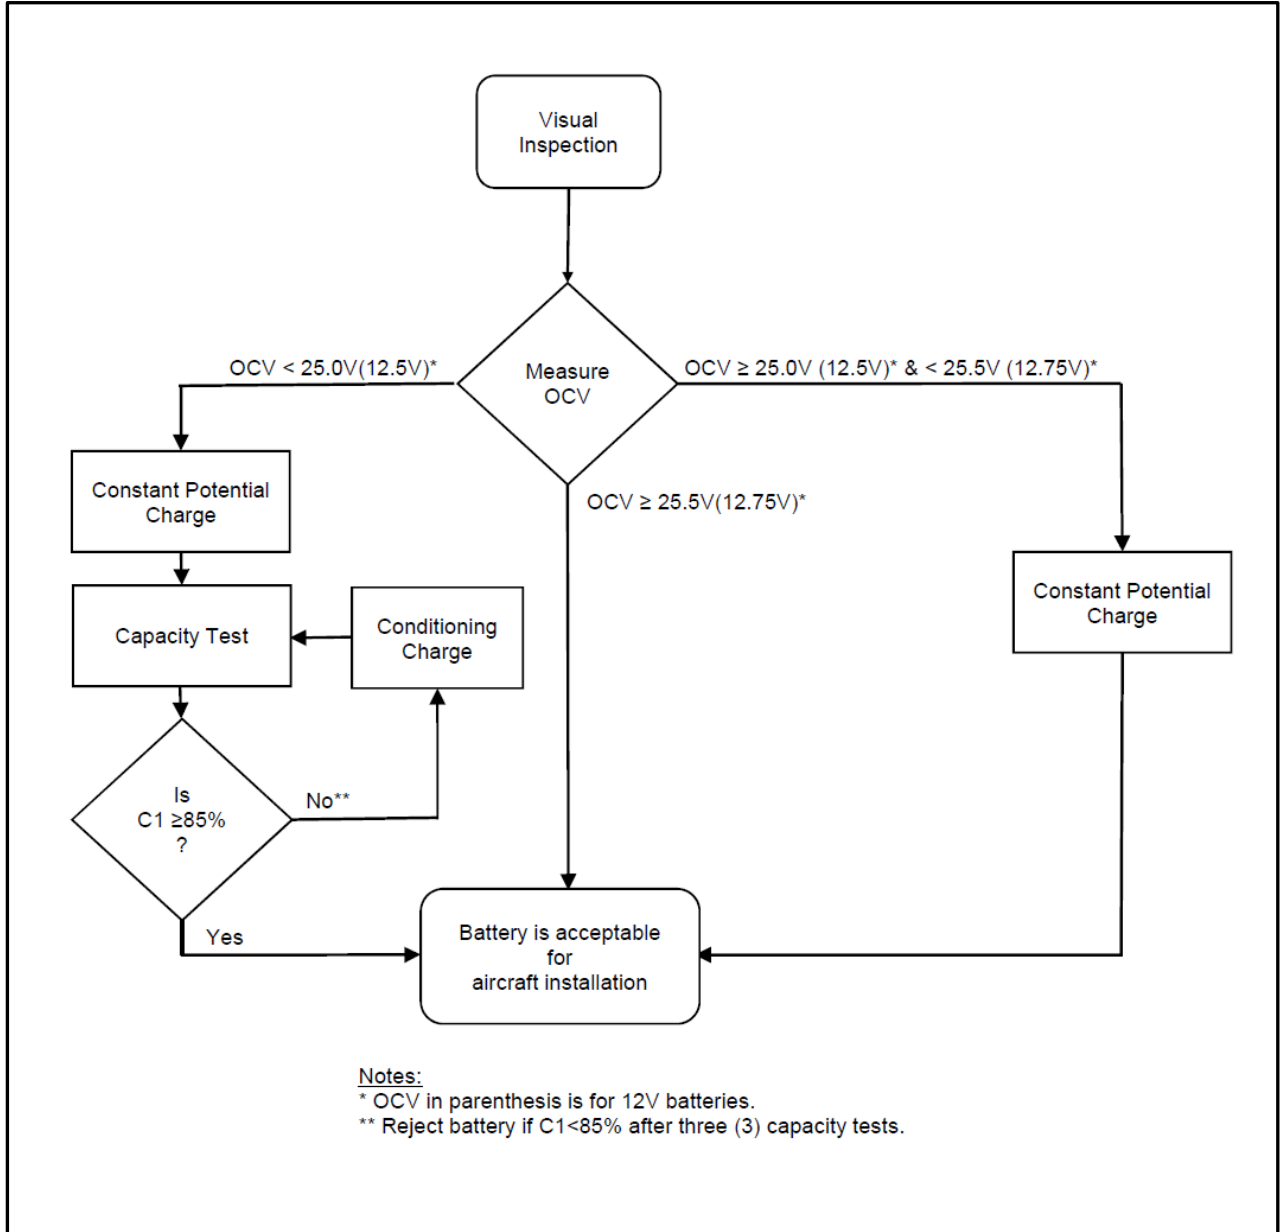

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG-450 AIRCRAFT BATTERY

APPENDIX C – FLOWCHART FOR CAPACITY TESTING

